



STARTLINK

COMPATABLE WITH

A15,A20,A777

G15,G27,G777

**VEHICLE SECURITY SYSTEM
PRODUCT MANUAL**

Limited Lifetime Warranty

This StartLink system is warranted to the original purchaser, to be free from defects in material and workmanship. The manufacturer will repair or replace at its option, and free of charge for the first twelve (12) months, any part that proves defective in material or workmanship under normal installation, use, and service, provided the product is returned to the manufacturer freight prepaid. After the first 12 month of the warranty period there will be a maximum service charge of \$50.00 per calendar year (if required) for repair and/or replacement of any defective parts.

A copy of the original purchase and installation receipt must accompany any products returned for warranty service. Warranty is limited to defective parts and/or replacement parts only and excludes any incidental, and consequential damages connected therewith.

The manufacturer of this theft deterrent system makes no warranty against the theft of the vehicle or its contents. This warranty is not to be construed as an insurance policy against loss.


WARRANTY OF INSTALLATION LABOR, REMOVAL AND RE-INSTALLATION CHARGES ARE NOT THE RESPONSIBILITY OF THE MANUFACTURER.

Note: This Warranty is voided if the product was not installed by an Authorized ScyTek Dealer.

Alarm Programming Branch Table

Branch	Feature	Button 1 (default)	Button 2	Button 3
1	Arm & Disarm Chirps/Honk	Siren Chirps enable	Siren & Horn Disable	Siren & Horn Enable
2	Arm Mode	Manual Arming	Passive Arming	Door Trigger N.Close
3	Passive Door Locking	Disable	Enable	Door Trigger N.Open
4	Ignition Controlled Locks	On	Off	Set Override Code
5	Ignition Controlled Unlock	All	Driver Only	Disabled
6	Ignore Open Door Report	Report	Ignore	Lock,lock,lock Mode Enable
7	Auto Rearming	Disable	Enable	Lock,lock,lockMode Disable
8	Door Unlock Pulse	Single	Double	Pulse Ignition with unlock
9	Warnaway Report	Enable	Disable	
10	Disarm with Aux 1	Disable	Enable	
11	Door Lock Pulse Length	1 second	3 seconds	0.1 second
12	Anti-Carjack Type	Manual	Passive	Full-time
13	Anti-Carjack Mode	Disable	Enable	Shock Sensor mode Enable
14	Horn Honk Chirp	Normal	Louder	Loudest
15	Aux 2 Activate on Arm	Disable	Enable	
16	Factory Disarm Secure	Disable	Enable/ 4 Times Unlock	Accessory Output
17	Aux 2 Mode	Pulsed	Timed	Latched
18	Aux 2 Type	Channel Output	Starter Output	Ignition Output
19	Extended Parking Lights	On	Off	
20	Databus Input Triggers	Enable	Disable	
21	Ignition 2Mode Ilink system	Ignition 2	Accessory 2	Starter 2
22	Starter Confirmation Chirps	Disable	Enable	
23	Lock After Start	On	Off	
24	Lock After Shutdown	On	Off	
25	Unlock Before Start	Disable	Enable	
26	Engine Run Timer	15 Minutes	25 Minutes	
27	Automatic Start Mode	2 Hours	1 Hour	
28	Crank Time	Normal	Extended	Super Extended
29	Engine Sense Mode	Smart sense/RPM	Voltage sense only	Smart Sense Monitor off
30	Engine Type	Gas	Diesel	
31	Not Applicable			
32	Factory Alarm Upgrade	Enable	Enable with validation	Disable
33	Validation/Brake Input Mode	Validation	Brake	

Wiring Diagram

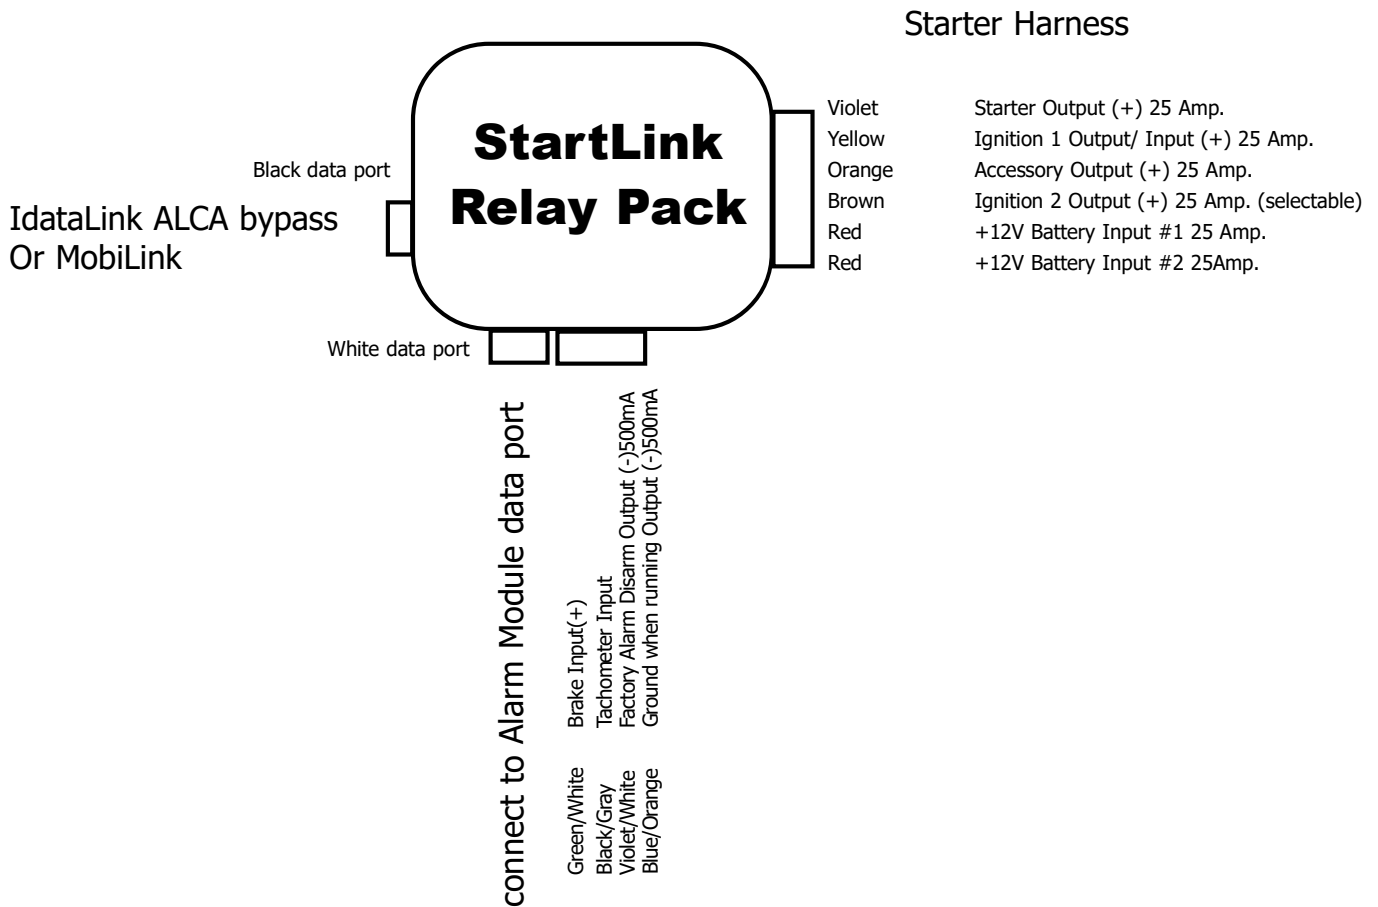

For Detailed User & Installation Manual refer to
www.scytek.net

ScyTek Electronics

11627 Cantara Street
North Hollywood, CA 91605
www.scytek.net